



Single Rate Switch

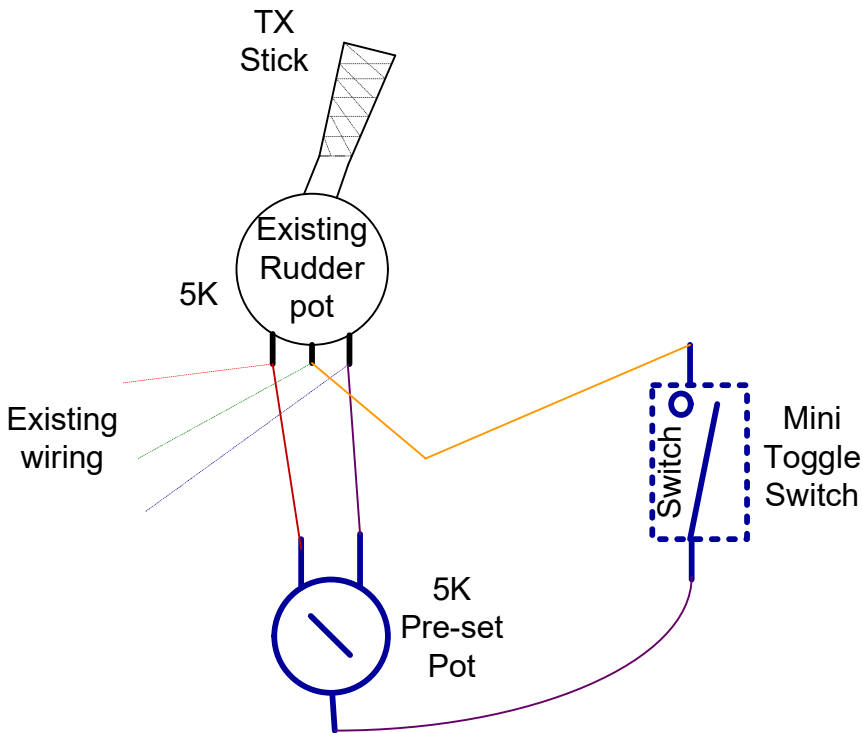


Add a single or dual rate switch to the transmitter to limit the rudder or throttle as required.

This will void any warranty and does require some fine solder work.

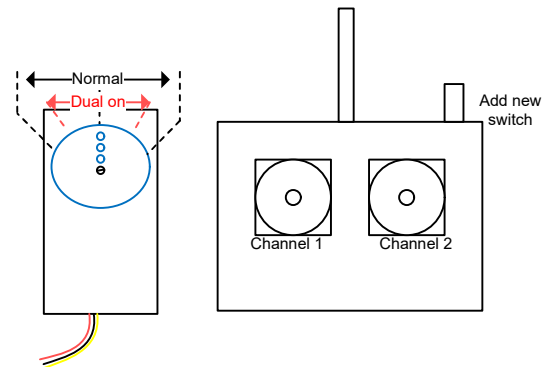

Dual Rate Switch

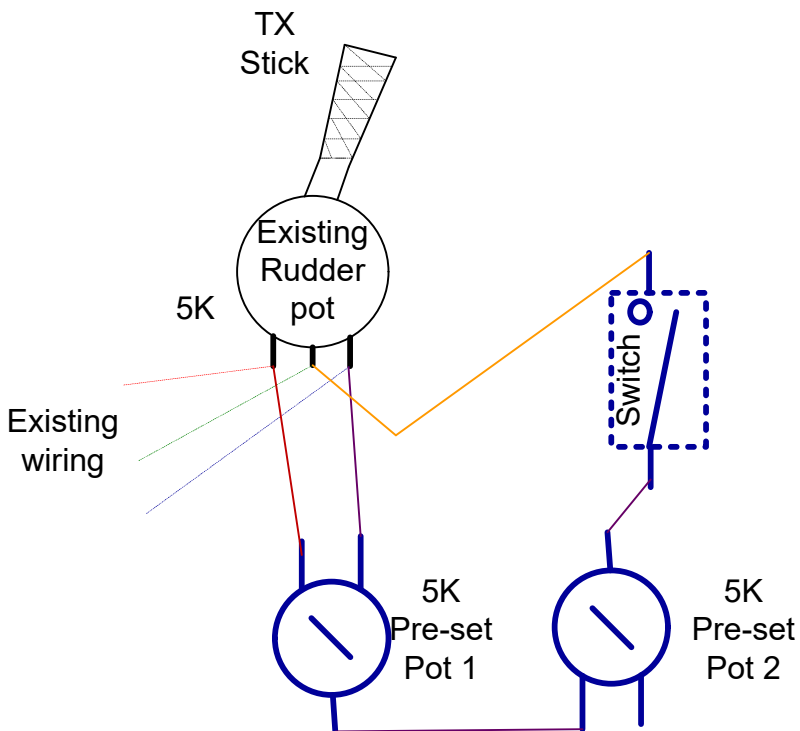

Add a dual rate switch will give you more control. Set pot 1 first to centre the servo then pot 2 to limit the rudder or throttle as required.

This will void any warranty and does require some fine solder work.

You may use a 4.7K pot but both should be the same as the existing rudder pot.